



How to Apply Clayborn Heating Tape to a Flat Surface

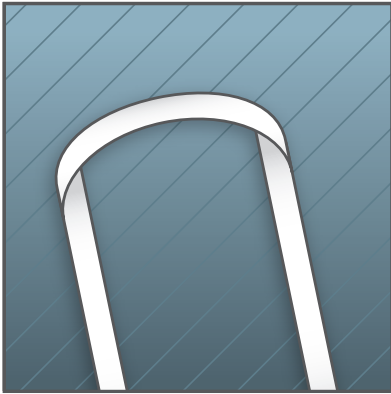


Apply heat tape in back-and-forth runs as shown. Leave end loops with adhesive side up.

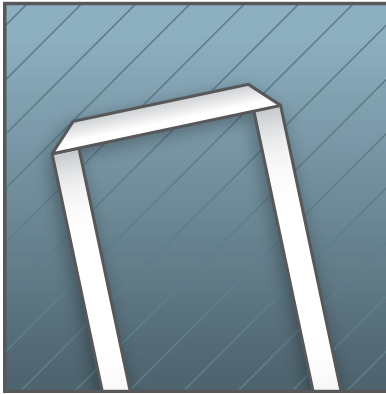

Press end loops flat, creasing corners at 45° angles.



Apply Heat Transfer Tape across end loops and roll down firmly.

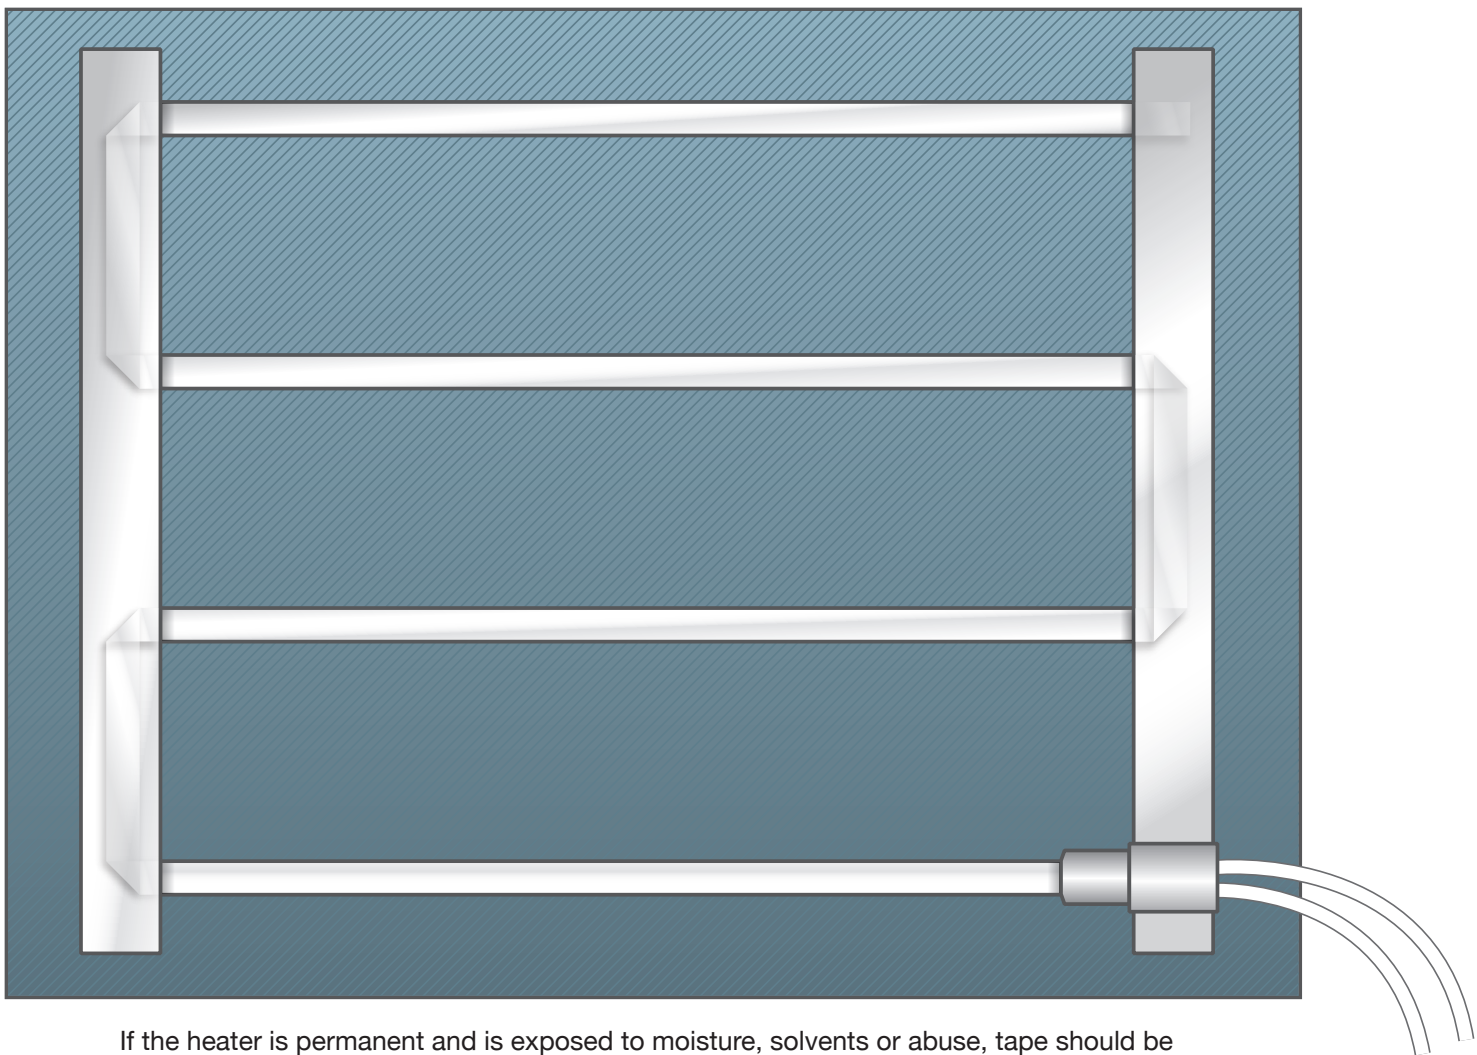

If the heater is permanent and is exposed to moisture, solvents or abuse, tape should be coated with a protective silicone rubber sealant.*.